

EAGLE ALARMS (EASTERN) Ltd

USING YOUR LYNX BURGLAR ALARM

To Arm: (turn on)

Press in your access code and press #. A beeping noise will be heard, this is your EXIT time. You now have that time to exit the protected part of your property. After the exit time the beeping noise will stop and the yellow status light will glow. This tells you that the alarm is turned on. **Alternatively press 1 then # this is called quick arm.**

To Disarm: (Turn off)

Enter your access code and press #. You have got the ENTRY time (normally 20 seconds) to do this.

To Isolate 1 or more detectors:

Enter your access code and press *. All the red L.E.D. lights available will glow. Press the numbers of the zones that you do not want protected, and then press #

Panic Mode:

Press * & # together. This will start all the sirens going. To stop, enter your access code and press #.

Changing Code numbers:

Use the following sequence

Press keys **4 & 6 together # old code # new code #.**

Nitearm:

Press 9 then 1 then #. This will activate your nitearm sensors only.

Remote Control

- Button 1** This arms, and disarms the whole alarm. The sirens will chirp once, and the flashing light in the outside siren will flash for 15 seconds when you turn the alarm on, and the sirens will chirp twice when you turn the alarm off
- Button 2** This arms, and disarms nitearm zone/s only
- Button 3** Opens and closes your garage door (if supplied and fitted)
- Button 4** Opens and closes your second garage door (if supplied and fitted)

If you have any problems please phone me.

Rob Lyons

5357117

Mobile 0274 740797