



Eagle Alarms (Eastern) Ltd

P.O. Box 38822

Howick

5357117 027 4740797

E-mail: eagleest@ihug.co.nz

Please take a few moments to read the following information about your Security Alarm

USING YOUR TRAXX BURGLAR ALARM

To Arm: (turn on)

Press in your access code and press #. A beeping noise will be heard, this is your EXIT time (normally 60 seconds). You now have that time to exit the protected part of your property. After the exit time the beeping noise will stop and the yellow status light will glow. This tells you that the alarm is turned on. ***Alternatively press 1 then # this is called quick arm.***

To Disarm: (Turn off)

Enter your access code and press #. You have got the ENTRY time (normally 20 seconds) to do this.

To Isolate 1 or more detectors:

Enter your access code and press *. All the red L.E.D. lights available will glow. Press the numbers of the zones that you do not want protected, and then press #

Panic Mode:

Press * & # together. This will start all the sirens going. To stop, enter your access code and press #.

Changing Code numbers:

Use the following sequence

Press keys **4 & 6 together**, #, **old code**, #, **new code**, #.

Nitearm:

Press 0 then 9 then #. This will activate your nitearm sensors only